



## FORWARD OFFSET LINE PLACEMENT

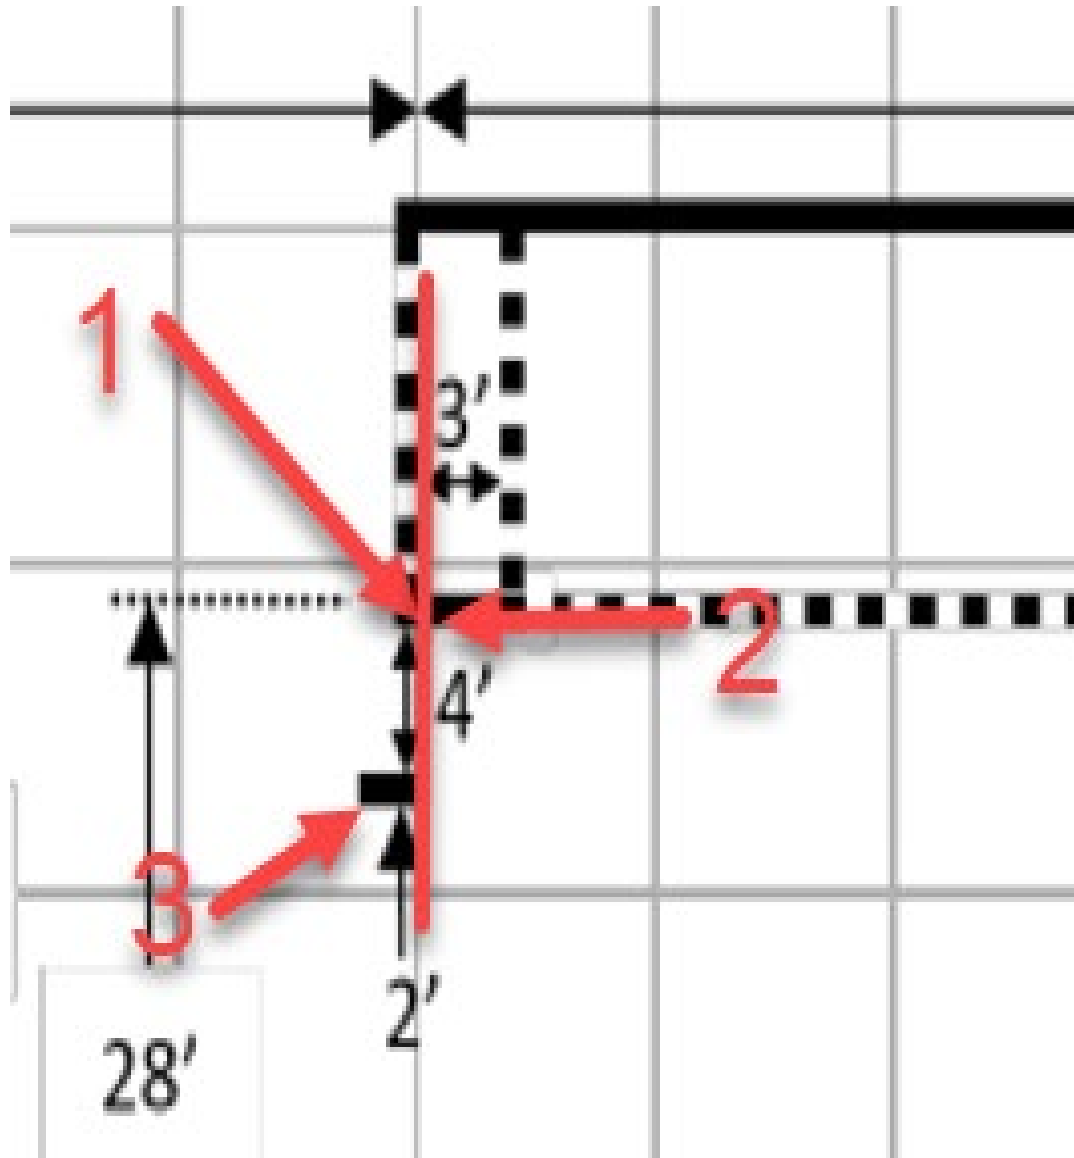

1. The Forward Offset Line should start from the OUTSIDE of the boundary line of the 100 foot box and measure 4 feet away
2. The line must be in alignment with the INSIDE of the front boundary line of the 100 foot box
3. The line MUST be 2-feet in length and face AWAY from the 100 foot box

# REVERSE OFFSET BACKING BOX PLACEMENT

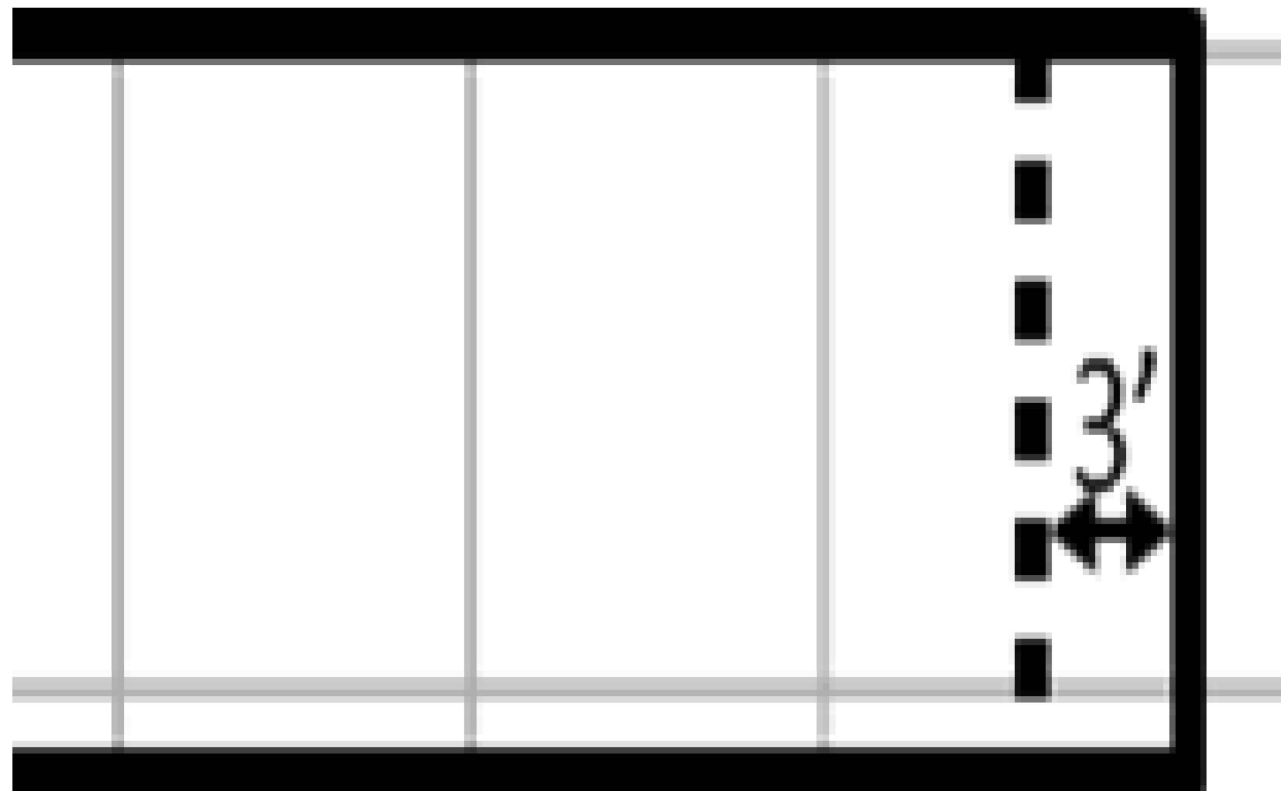

# **WE GO LIVE ON AUGUST 28, 2023**

- **ONCE MODERIZATION GOES LIVE, THE 2015 TESTING MODEL ENDS.**

**PLAN TRAINING AND TESTING SCHEDULES ACCORDINGLY.**

**PLAN LOT REPAINTING ACCORDINGLY.**